



# Wall-Mount™ Air Conditioners

## Specification Sheets

Document #	Revision	Description
<a href="#">F1384</a>	10/2003	WA Engineering Specification Guide
<a href="#">F1742</a>	06/2003	WA424D, WA485D, WA604D Dehumidification Performance Data
<a href="#">F1723</a>	10/2001	Hot Gas By-Pass Overview
<a href="#">S3233</a>	01/2004	WA121 Series
<a href="#">S3208</a>	02/2004	WA182 – WA602 Series
<a href="#">S3348</a>	05/2005	WA38, WA49, WA61 (12SEER) Series
<a href="#">S3274</a>	08/2004	WA701 – WA721 Series
<a href="#">S3279</a>	04/2005	WL182-WL702 Series
<a href="#">S3339</a>	02/2005	Telecom Shelter Upgrade Series
<a href="#">F1731</a>	04/2002	Telecom Shelter Wall Curb
<a href="#">S3327</a>	10/2004	CT242 Com-Tec Series
<a href="#">F1749</a>	02/2002	WG Engineering Specification Guide
<a href="#">F1753</a>	08/2002	WG241D-WG601D Dehumidification Performance Data
<a href="#">S3344</a>	04/2005	WG241-WG601 Gas/Electric Series
<a href="#">F1770</a>	02/2004	WGWC3 Series Wall Curb (For use with WG / WAG Series Units)
<a href="#">S3370</a>	01/2004	WUVCLP Series Wall-Mount UV-C Light Package
<a href="#">F1850</a>	09/2004	WISP Series Sound Plenum / <a href="#">7960-519</a> Installation Instructions
<a href="#">F1848</a>	05/2004	Bard Wall-Mount™ Control Module Applications
<a href="#">F1403</a>	05/2002	WERV Energy Recovery Technical Guide
<a href="#">F1722</a>	04/2002	Wall-Mount™ Ventilation Overview
<a href="#">Vent Opt Link</a>		Wall-Mount™ Ventilation Options
<a href="#">50hz Link</a>		WA / WE Wall-Mount <b>50hz</b> Series (R-22 and R407C “Green” Refrigerant)
<a href="#">Color Link</a>		Bard Wall-Mount Cabinet Finishes
<a href="#">Grille Link</a>		Supply & Return Grille Submittal Information
<a href="#">TechniCoat Link</a>		Phenolic Coated Coil Option Information
<a href="#">Warranty Link</a>		Bard Limited Warranty (USA, Canada & Mexico)

## WA ‘Step Capacity’ Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA3S1-A	911-0440	<a href="#">2100-451</a>	<a href="#">2110-474</a>	<a href="#">4095-141(A)</a>
WA3S1-B		<a href="#">2100-451</a>	<a href="#">2110-474</a>	
WA3S1-C		<a href="#">2100-451</a>	<a href="#">2110-474</a>	
WA4S1-A	911-0440	<a href="#">2100-451</a>	<a href="#">2110-474</a>	<a href="#">4095-141(A)</a>
WA4S1-B		<a href="#">2100-451</a>	<a href="#">2110-474</a>	
WA4S1-C		<a href="#">2100-451</a>	<a href="#">2110-474</a>	
WA5S1-A	911-0440	<a href="#">2100-451</a>	<a href="#">2110-474</a>	<a href="#">4095-141(A)</a>
WA5S1-B		<a href="#">2100-451</a>	<a href="#">2110-474</a>	
WA5S1-C		<a href="#">2100-451</a>	<a href="#">2110-474</a>	



# Wall-Mount™ Air Conditioners

## WA Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA121-K	911-0225	<a href="#">2100-234(G)</a>	<a href="#">2110-412(L)</a>	<a href="#">4095-117(E)</a>
WA121-A	911-0225	<a href="#">2100-234(G)</a>	<a href="#">2110-412(L)</a>	<a href="#">4095-114(E)</a>
WA182-A	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(C)</a>	<a href="#">4095-130(B)</a>
WA242-A	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(C)</a>	<a href="#">4095-130(B)</a>
WA242-B	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(C)</a>	<a href="#">4095-228(C)</a>
WA242-C	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(C)</a>	<a href="#">4095-319(C)</a>
WA253-A	911-0394	<a href="#">2100-406</a>	<a href="#">2110-463(A)</a>	<a href="#">4095-128(C)</a>
WA253-B	911-0394	<a href="#">2100-406</a>	<a href="#">2110-463(A)</a>	<a href="#">4095-227(E)</a>
WA302-A	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-134</a>
WA302-B	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-234</a>
WA302-C	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-321</a>
WA372-A	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-134</a>
WA372-B	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-234</a>
WA372-C	911-0390	<a href="#">2100-404(A)</a>	<a href="#">2110-461(B)</a>	<a href="#">4095-321</a>
WA381-A	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-128(C)</a>
WA381-B	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-227(E)</a>
WA381-C	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-318(D)</a>
WA423-A	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-137</a>
WA423-B	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-234</a>
WA423-C	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-321</a>
WA484-A	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-128(C)</a>
WA484-B	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-227(E)</a>
WA484-C	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-318(D)</a>
WA491-A	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-128(C)</a>
WA491-B	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-227(E)</a>
WA491-C	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-318(D)</a>



# Wall-Mount™ Air Conditioners

## WA Series Wall-Mount Air Conditioners (Continued)

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA602-A	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-128(C)</a>
WA602-B	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-227(E)</a>
WA602-C	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-318(D)</a>
WA611-A	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-129(C)</a>
WA611-B	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-231(E)</a>
WA611-C	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-320(C)</a>
WA702-A	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-129(C)</a>
WA701-B	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-231(E)</a>
WA701-C	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-320(C)</a>
WA721-B	911-0414	<a href="#">2100-425</a>	<a href="#">2110-466(B)</a>	<a href="#">4095-231(E)</a>

## WL Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WL182-A	911-0340	<a href="#">2100-370(B)</a>	<a href="#">2110-444(C)</a>	<a href="#">4095-130(B)</a>
WL242-A	911-0340	<a href="#">2100-370(B)</a>	<a href="#">2110-444(C)</a>	<a href="#">4095-130(B)</a>
WL242-B	911-0340	<a href="#">2100-370(B)</a>	<a href="#">2110-444(C)</a>	<a href="#">4095-228(C)</a>
WL253-A	911-0396	<a href="#">2100-407</a>	<a href="#">2110-464(A)</a>	<a href="#">4095-128(C)</a>
WL253-B	911-0396	<a href="#">2100-407</a>	<a href="#">2110-464(A)</a>	<a href="#">4095-227(E)</a>
WL302-A	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-134</a>
WL302-B	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-234</a>
WL302-C	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-321</a>
WL372-A	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-134</a>
WL372-B	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-234</a>
WL372-C	911-0392	<a href="#">2100-405</a>	<a href="#">2110-462(B)</a>	<a href="#">4095-321</a>
WL423-A	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-137</a>
WL423-B	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-234</a>
WL423-C	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-321</a>



# Wall-Mount™ Air Conditioners

## WL Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WL484-A	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-128(C)</a>
WL484-B	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-227(E)</a>
WL484-C	911-0376	<a href="#">2100-400</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-318(D)</a>
WL602-A	911-0237	<a href="#">2100-277(C)</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-128(C)</a>
WL602-B	911-0237	<a href="#">2100-277(C)</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-227(E)</a>
WL602-C	911-0237	<a href="#">2100-277(C)</a>	<a href="#">2110-454(A)</a>	<a href="#">4095-318(D)</a>
WL702-A	911-0417	<a href="#">2100-426</a>	<a href="#">2110-468(B)</a>	<a href="#">4095-129(C)</a>
WL701-B	911-0417	<a href="#">2100-426</a>	<a href="#">2110-468(B)</a>	<a href="#">4095-231(E)</a>
WL701-C	911-0417	<a href="#">2100-426</a>	<a href="#">2110-468(B)</a>	<a href="#">4095-320(C)</a>

## WA Dehum Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA424DA	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-140</a>
WA424DB	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-240</a>
WA424DC	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-340</a>
<b>Supplemental Dehumidification Manual For The Above</b>			<a href="#">7960-505(A)</a>	
WA485DA	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-140</a>
WA485DB	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-240</a>
WA485DC	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-340</a>
<b>Supplemental Dehumidification Manual For The Above</b>			<a href="#">7960-506</a>	
WA604DA	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-140</a>
WA604DB	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-240</a>
WA604DC	911-0370	<a href="#">2100-398(A)</a>	<a href="#">2110-452(B)</a>	<a href="#">4095-340</a>
<b>Supplemental Dehumidification Manual For The Above</b>			<a href="#">7960-507</a>	



# Wall-Mount™ Air Conditioners

## Telecom Shelter Upgrade Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA4842A	911-0372	<a href="#">2100-401</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-128(C)</a>
WA4842B	911-0372	<a href="#">2100-401</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-227(E)</a>
WA4843A	911-0372	<a href="#">2100-401</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-128(C)</a>
WA4843B	911-0372	<a href="#">2100-401</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-227(E)</a>
WA6022A	911-0314	<a href="#">2100-348(D)</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-128(C)</a>
WA6022B	911-0314	<a href="#">2100-348(D)</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-227(E)</a>
WA6023A	911-0314	<a href="#">2100-348(D)</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-128(C)</a>
WA6023B	911-0314	<a href="#">2100-348(D)</a>	<a href="#">2110-457(A)</a>	<a href="#">4095-227(E)</a>
WA7023A	911-0416	<a href="#">2100-427</a>	<a href="#">2110-470(A)</a>	<a href="#">4095-129(C)</a>
WA7013B	911-0416	<a href="#">2100-427</a>	<a href="#">2110-470(A)</a>	<a href="#">4095-129(E)</a>
WL4842A	911-0378	<a href="#">2100-402</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-128(C)</a>
WL4842B	911-0378	<a href="#">2100-402</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-227(E)</a>
WL4843A	911-0378	<a href="#">2100-402</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-128(C)</a>
WL4843B	911-0378	<a href="#">2100-402</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-227(E)</a>
WL6022A	911-0317	<a href="#">2100-351(D)</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-128(C)</a>
WL6022B	911-0317	<a href="#">2100-351(D)</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-227(E)</a>
WL6023A	911-0317	<a href="#">2100-351(D)</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-128(C)</a>
WL6023B	911-0317	<a href="#">2100-351(D)</a>	<a href="#">2110-458(A)</a>	<a href="#">4095-227(E)</a>
WL7023A	911-0419	<a href="#">2100-428</a>	<a href="#">2110-471(A)</a>	<a href="#">4095-129(C)</a>
WL7013B	911-0419	<a href="#">2100-428</a>	<a href="#">2110-471(A)</a>	<a href="#">4095-231(E)</a>

## WA/WL Hot Gas By-Pass Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA242HA	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(A)</a>	<a href="#">4095-130(B)</a>
WA242HB	911-0333	<a href="#">2100-369(C)</a>	<a href="#">2110-442(A)</a>	<a href="#">4095-228(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-375(A)</a>	
WA361HA	911-0175	<a href="#">2100-192(M)</a>	<a href="#">2110-409(L)</a>	<a href="#">4095-130(B)</a>
WA361HB	911-0175	<a href="#">2100-192(M)</a>	<a href="#">2110-409(L)</a>	<a href="#">4095-228(C)</a>
WA361HC	911-0175	<a href="#">2100-192(M)</a>	<a href="#">2110-409(L)</a>	<a href="#">4095-319(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-375(A)</a>	



# Wall-Mount™ Air Conditioners

## WA/WL Hot Gas By-Pass Series Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WA484HA	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-129(C)</a>
WA484HB	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-231(E)</a>
WA484HC	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	
WA602HA	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-129(C)</a>
WA602HB	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-231(E)</a>
WA602HC	911-0371	<a href="#">2100-398(A)</a>	<a href="#">2110-453(A)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	
WA702HA	911-0415	<a href="#">2100-425</a>	<a href="#">2110-467(B)</a>	<a href="#">4095-129(C)</a>
WA701HB	911-0415	<a href="#">2100-425</a>	<a href="#">2110-467(B)</a>	<a href="#">4095-231(E)</a>
WA701HC	911-0415	<a href="#">2100-425</a>	<a href="#">2110-467(B)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	
WL484HA	911-0377	<a href="#">2100-400</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-129(C)</a>
WL484HB	911-0377	<a href="#">2100-400</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-231(E)</a>
WL484HC	911-0377	<a href="#">2100-400</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	
WL602HA	911-0325	<a href="#">2100-277(C)</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-129(C)</a>
WL602HB	911-0325	<a href="#">2100-277(C)</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-231(E)</a>
WL602HC	911-0325	<a href="#">2100-277(C)</a>	<a href="#">2110-459(A)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	
WL702HA	911-0418	<a href="#">2100-426</a>	<a href="#">2110-469(A)</a>	<a href="#">4095-129(C)</a>
WL701HB	911-0418	<a href="#">2100-426</a>	<a href="#">2110-469(A)</a>	<a href="#">4095-231(E)</a>
WL701HC	911-0418	<a href="#">2100-426</a>	<a href="#">2110-469(A)</a>	<a href="#">4095-320(C)</a>
<b>Supplemental Hot Gas By-Pass Manual For The Above</b>			<a href="#">2100-235(F)</a>	



# Wall-Mount™ Air Conditioners

## CT Series Cabinet Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
CT242-A0Z	911-0276	<a href="#">2100-314(D)</a>	<a href="#">2110-428(C)</a>	<a href="#">4104-100(C)</a>
CT242-A02	911-0276	<a href="#">2100-314(D)</a>	<a href="#">2110-428(C)</a>	<a href="#">4104-110(C)</a>
CT242-A04	911-0276	<a href="#">2100-314(D)</a>	<a href="#">2110-428(C)</a>	<a href="#">4104-120(C)</a>
CT242-B0Z	911-0276	<a href="#">2100-314(D)</a>	<a href="#">2110-428(C)</a>	<a href="#">4104-200(C)</a>
CT242-B03	911-0276	<a href="#">2100-314(D)</a>	<a href="#">2110-428(C)</a>	<a href="#">4104-210(C)</a>
CT242RA0Z	911-0277	<a href="#">2100-337(A)</a>	<a href="#">2110-433(A)</a>	<a href="#">4104-101(A)</a>
CT242RA02	911-0277	<a href="#">2100-337(A)</a>	<a href="#">2110-433(A)</a>	<a href="#">4104-111(A)</a>
CT242RA04	911-0277	<a href="#">2100-337(A)</a>	<a href="#">2110-433(A)</a>	<a href="#">4104-121(A)</a>
CT242RB0Z	911-0277	<a href="#">2100-337(A)</a>	<a href="#">2110-433(A)</a>	<a href="#">4104-201(A)</a>
CT241RB03	911-0277	<a href="#">2100-337(A)</a>	<a href="#">2110-433(A)</a>	<a href="#">4104-211(A)</a>

## WG Series Gas/Electric Wall-Mount Air Conditioners (Standard)

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WG241-A	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-132(A)</a>
WG241-B	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-232(A)</a>
WG241-C	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-331(A)</a>
WG301-A	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-130(B)</a>
WG301-B	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-230(D)</a>
WG301-C	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-327(B)</a>
WG361-A	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-130(B)</a>
WG361-B	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-230(D)</a>
WG361-C	911-0368	<a href="#">2100-365(K)</a>	<a href="#">2110-805(B)</a>	<a href="#">4085-327(B)</a>
WG422-A	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-126(A)</a>
WG422-B	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-226(B)</a>
WG422-C	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-323(A)</a>
WG481-A	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-120(B)</a>
WG481-B	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-220(B)</a>
WG481-C	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-317(C)</a>



# Wall-Mount™ Air Conditioners

## WG Series Gas/Electric Wall-Mount Air Conditioners

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WG601-A	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-120(B)</a>
WG601-B	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-220(B)</a>
WG601-C	911-0328	<a href="#">2100-365(K)</a>	<a href="#">2110-803(D)</a>	<a href="#">4085-317(C)</a>
WG Trouble Shooting Manual			<a href="#">2100-367(B)</a>	

## WG Series Gas/Electric Wall-Mount Air Conditioners (Dehumidification)

Models	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WG241DA	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-131(A)</a>
WG241DB	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-231(B)</a>
WG241DC	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-329(B)</a>
WG301DA	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-133(A)</a>
WG301DB	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-233(B)</a>
WG301DC	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-333(B)</a>
WG361DA	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-133(A)</a>
WG361DB	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-233(B)</a>
WG361DC	911-0400	<a href="#">2100-376(G)</a>	<a href="#">2110-806(B)</a>	<a href="#">4085-333(B)</a>
WG422DA	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-128(C)</a>
WG422DB	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-228(C)</a>
WG422DC	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-325(B)</a>
WG481DA	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-124(B)</a>
WG481DB	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-222(C)</a>
WG481DC	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-319(C)</a>
WG601DA	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-124(B)</a>
WG601DB	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-222(C)</a>
WG601DC	911-0349	<a href="#">2100-376(G)</a>	<a href="#">2110-804(B)</a>	<a href="#">4085-319(C)</a>
Supplemental WG Trouble Shooting Manual			<a href="#">2100-367(B)</a>	